


### Lay Out All Components

Place all frame parts, bases, and the printed fabric on the floor in order. This helps you identify each piece before assembly.



### Attach the Curved Corners

Use the curved corner bars to connect the vertical and horizontal poles at the top corners of the frame.

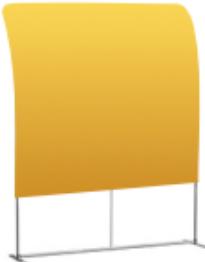

### Install the Fabric Graphic

Slide the fabric graphic over the top of the frame like a sleeve. Pull it down until the print is fully stretched and aligned.



### Connect the Bases

Insert the bottom ends of the left and right vertical poles into the metal bases. Ensure each pole locks securely into place.



### Zip the Graphic Closed

At the bottom of the frame, close the zipper to tension the fabric evenly. Your StraightLine Media Wall is now ready for display.